




# TRANSITIONAL

SLEEP SYSTEM  
By HSM Bedding Solutions

	REMOTE FUNCTIONS
a.	<b>POWER</b> - Turn remote control on and off
b.	<b>HEAD UP</b> - Raise head position up
c.	<b>HEAD DOWN</b> - Move head position down
d.	<b>FOOT UP</b> - Move foot position up
e.	<b>FOOT DOWN</b> - Move foot position down
f.	<b>HEAD &amp; FOOT UP</b> - Raised head and foot both at the same time
g.	<b>HEAD &amp; FOOT DOWN</b> - Lowers head and foot both at the same time
h.	<b>FLASHLIGHT</b> - Flashlight Off & On

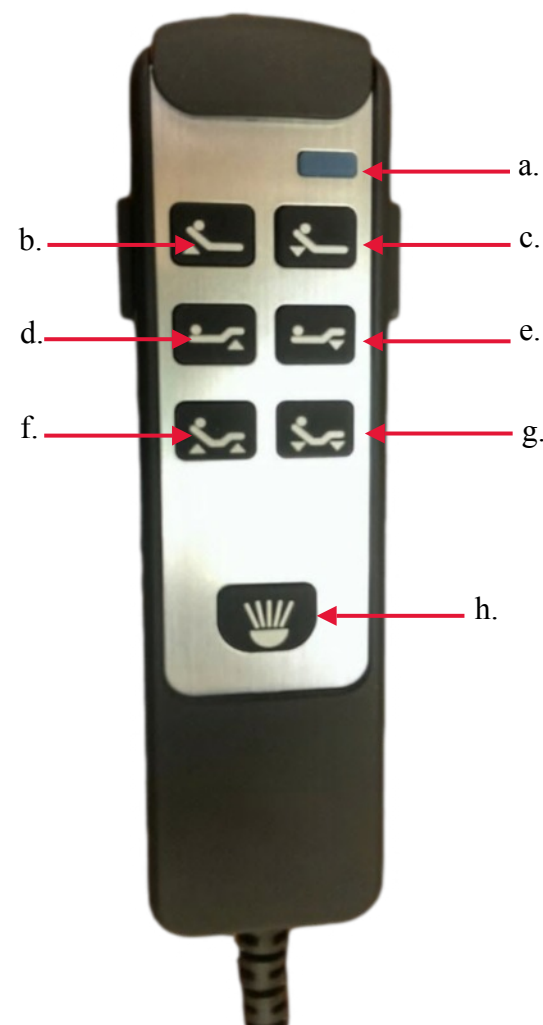

For questions regarding set-up and installation, please refer to the complete installation manual online at [www.transitionalsleep.com](http://www.transitionalsleep.com) or call 844.433.2435

## Quick Setup - TS 150

# Transitional Adjustable Base - Quick Guide

(For detailed instructions, refer to the owners manual online at [www.transitionalsleep.com](http://www.transitionalsleep.com))

## TS 150 - TS 250

Your adjustable bed kit contains the following parts:

- a. (4) Base Legs
- b. Remote Control (batteries included with wireless)
- c. Mattress Retainer Bar (2) screws and (2) brackets.
- d. Power Cord (for Battery Power Box - TS 200 Only)
- e. Battery Backup Pack (battery included - TS 200 Only)




### Step 1: Open Packaging

- a. Lay shipping box flat on floor (top up) and open to remove box top. Remove parts box and all loose parts.




### Step 2: Install Legs

- b. Install one leg to each corner of the base by screwing them into the single hole threaded inserts located on the steel frame.

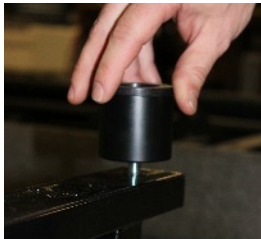


### Step 3: Install Batteries and Power Cord

- a. Locate and open the battery compartment in the AC Adapter. Install two 9V batteries and close compartment.

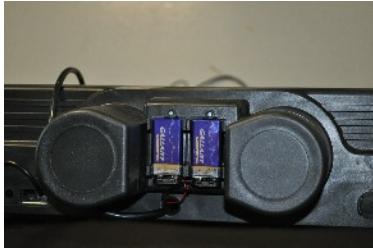

### Step 4: Check Remote Connection

- a. Press the power button on the remote to check the connection. The TS 100 remote is pre-connected to the motor before shipping. If your remote is not responding during testing, you will need to check the remote control plug jack located on the side of the motor. Confirm that the connection is secure.

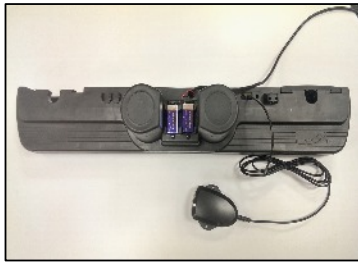




### Step 5: Turn Base to Upright Position

Lift base out of box by metal frame (DO NOT pick up by upholstered panels) and set on legs. \*\* Always use 2 people to lift base.\*\*



### Step 6: Install Mattress Retainer

- a. Remove screws and capture washers with provided Hex-L Key.
- b. Install mattress retainer using screws and capture washers.

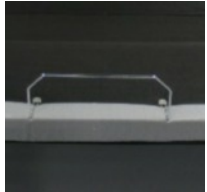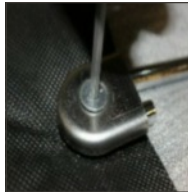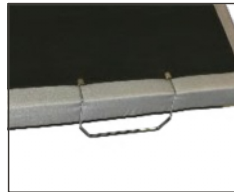

### Step 7: Powering the Base

Plug base power cord into surge protector or wall outlet



### Step 8: Split Base Sync (if applicable)

- a. For a synced split base set-up, a sync cord (sold separately) is required.
- b. Install sync cord to bases by plugging in cord end into jack on motor (next to wired remote connection.)



For questions or comments regarding your Transitional Sleep System please call us toll free at 844.433.2435 or visit us online at [www.transitionalsleep.com](http://www.transitionalsleep.com)

  
**TRANSITIONAL**  
SLEEP SYSTEM  
By HSM Bedding Solutions